



# PORTABLE PA SYSTEM

## USER MANUAL

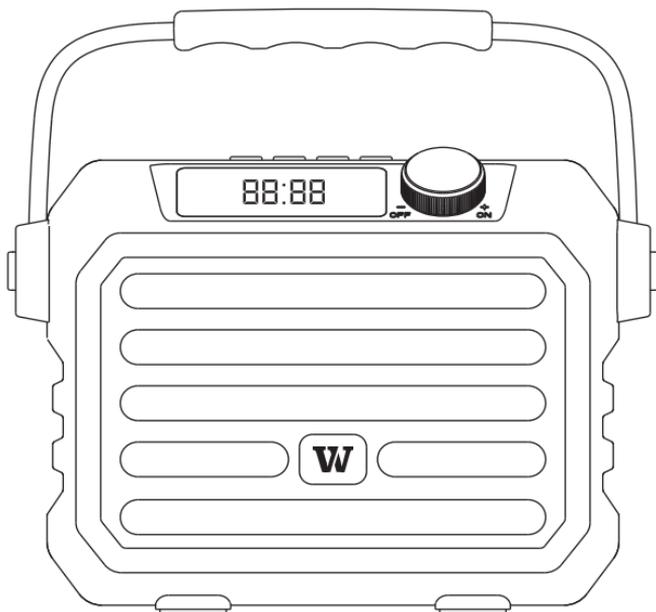

**H5 Plus**



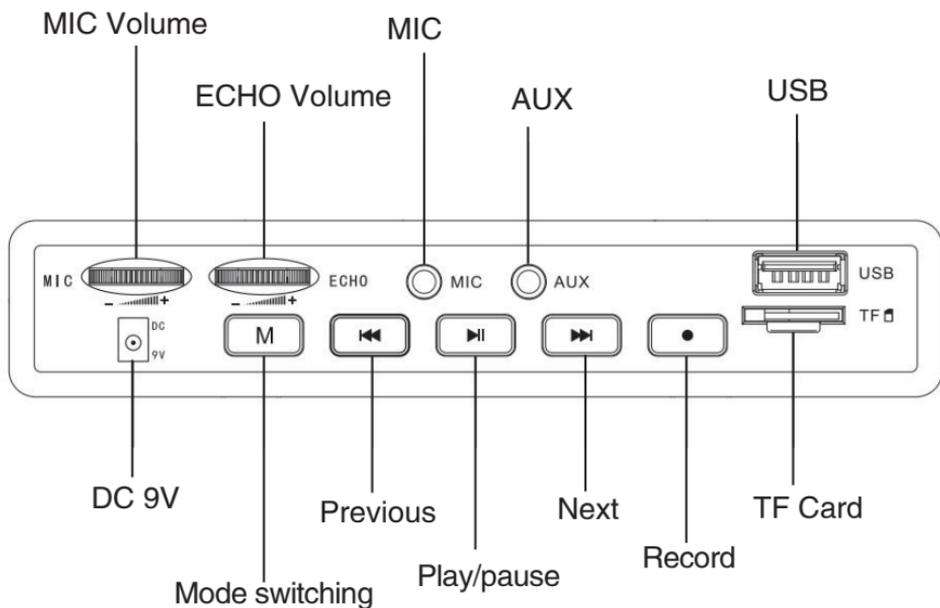

**M** : Press one time to switch modes among UHF, Bluetooth, FM and USB drive play; ( If you plug USB drive )

**⏮** : Previous



**⏭** : Next

**⏸** : Pause/Resume; Under any mode, Double click to turn on/off voice prompt, there will be a “Di” sound.

**🔊** : Turn on/off speaker; Control music volume;



**🔴** : Long press to start to recording; Short press to play recording or switch to play USB drive/TF card music.

## Function Illustration (Wireless MIC):.....

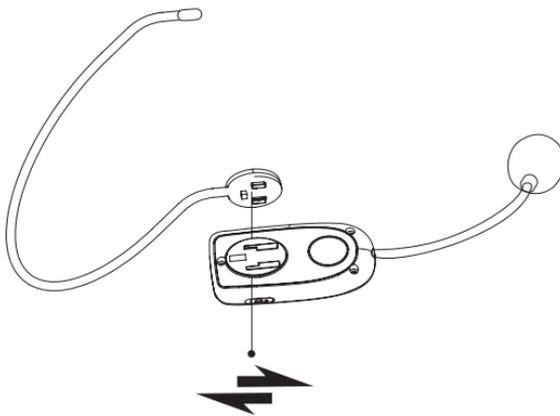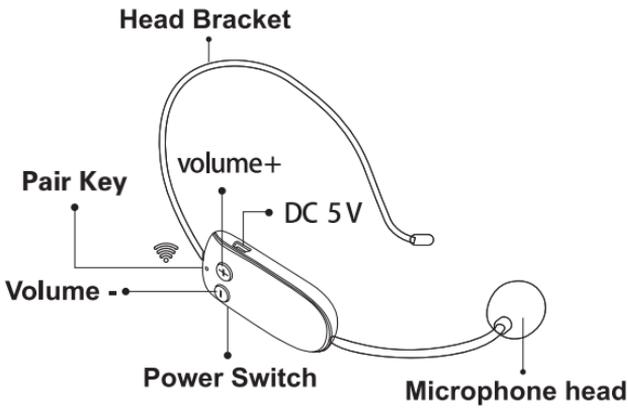


Detachable Head Bracket

## How to disassemble the wireless mic: .....

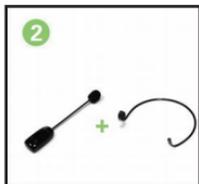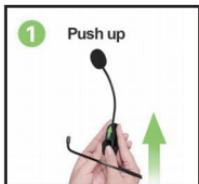

## Transmitter:

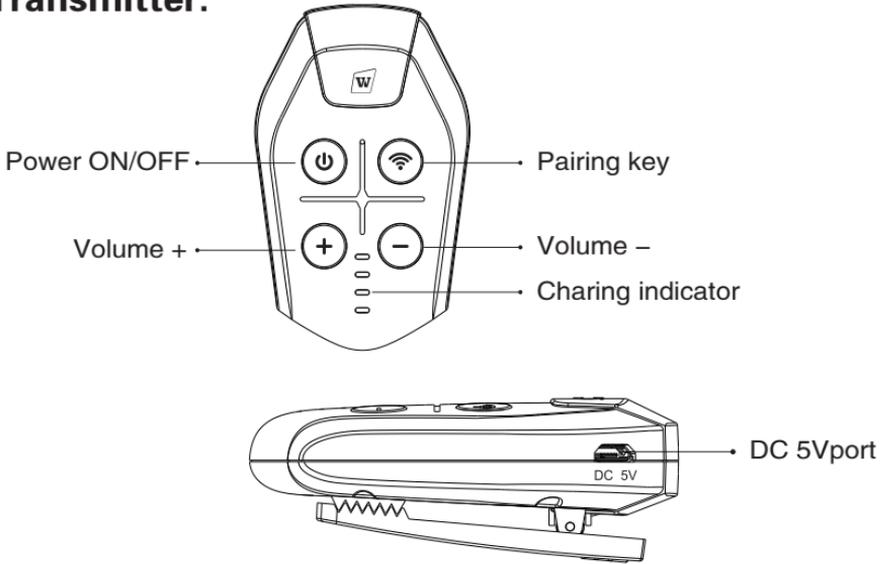

### Noted:

The transmitter is used with lapel mic or stand mic, and only one microphone can be used with the speaker at the same time, which means if you have paired the headset, you can not use the transmitter, that you can not use lapel mic or stand mic.

## MODES

initial

00:00

TF/micro SD card

SD

mic input only

UHF

bluetooth

BLUE

USB flash drive

USB

recording

REC

audio cable input

AUX LINE

FM radio

106.9 FM

Press **M** to change mode (except Recording mode).

## How to Pair Wireless Headset Microphone .....

- 1 Turn on U8 wireless headset microphone with Blue light becomes constantly lights.



- 2 Turn on speaker, short press M button to switch to UHF mode with screen shows: **UHF**, then long press M button again for 3 seconds to enter UHF pairing mode with voice prompt: **“UHF is waiting for connection...”**, meanwhile UHF indicator become flashes.
- 3 Do a press on the small silicone button wifi on the headset until speaker prompt: **“UHF is connected”**, then you could start to enjoy it.

**Noted:** When connected, by long press wifi button on the mic or long press the M button on the speaker would disconnect with speaker. Please refer above steps to re pair mic with speaker manually again.

## How to Use Wireless Lapel/Stand Mic System .....

- 1 Turn on transmitter and speaker



- 2 Turn on speaker, short press M button to switch to UHF mode with screen shows: **UHF**, then long press M button again for 3 seconds to enter UHF pairing mode with voice prompt: **“UHF is waiting for connection...”**, meanwhile UHF indicator become flashes.
- 3 Long press on the small silicone button wifi on the transmitter until speaker prompt: **“ UHF is connected”**
- 4 Plug lapel mic or stand mic into transmitter to use.

### Noted:

If the transmitter and speaker are too close, the howling will be very loud. Please do not face the front of the speaker at close range. You can use the MIC volume wheel on the speaker and "-" button on the transmitter to lower the volume to reduce the howling.


### Noted:

In a small room, when you using lapel microphone, you will experience feedback noise easily when your volume is high because the sound will easily bounce from walls and ceiling and feedback to the microphone. In order to avoid feedback or howling, volume level needs to be adjusted depending on the area you are using. Please try again by increasing volume level slowly to a point just below you hear feedback noise.



## How to Play FM ?

- 1 Click **M** to switch to FM mode with a screen shows like **106.9** , and there will be voice prompts: FM Mode

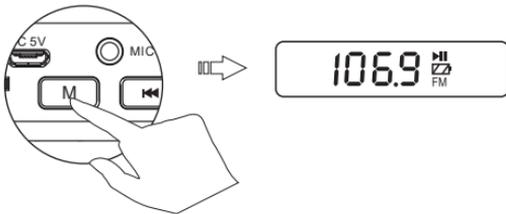

- 2 Long press **▶||** for about 3s to start automatic channel search  
The search will last about 1 min, just leave it before it's done.  
There will be several or dozens of channels. (The amount depends on the area. )  
Each channel is given a sequence number (in ascending order of frequency )  
For example, **106.9** = Channel 3
- 3 Click **◀▶** to play previous/next channel;


## How to Play Recording ?

 **Prerequisite: require a USB drive or TF card for storage and a microphone for input.**

- 1 Under any mode, long press ( 3s) **●** button to start recording;  
There will be a voice prompts **“Start recording.”**  
And the screen shows like this **00:01**
- 2 Connect with wireless mic or plug in an external wired mic to talk with it.
- 3 Click **●** button to finish and save recording; At this point, it will play recording file automatically you just made;  
Please click **▶||** button to pause/resume;  
Click **◀▶** to play previous/next recording;  
Click **●** again to play USB drive/TF card music.
- 4 Click **M** button to quit recording and switch to other modes;

## Music Play

Supports:




Refer to

**MODES**

### How to Connect Bluetooth ?.....

- 1 Click **M** to switch to Bluetooth mode with a screen shows **BLUE**, and there will be voice prompts:

Bluetooth is waiting for connection;

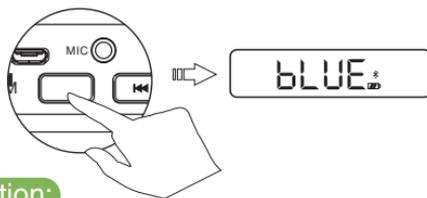

- 2 Turn on Bluetooth device and search named "H5" to pair.



### How to Play TWS ?.....

 - 1 Turn on two H5 speakers, click **M** button to enter Bluetooth mode, long press one of speaker's M button to enter pairing status, the other one Bluetooth indication become solid lights means these two speakers are connected successfully.
- 2 Turn on your phone or Bluetooth device and search named "H5" to pair.

## How to Play Aux



plug the 3.5mm audio cable into the AUX hole.

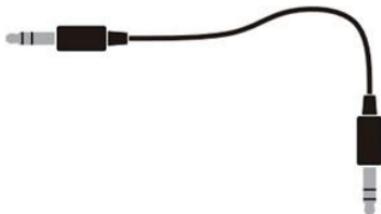

connect to any device with 3.5mm audio output



Audio Format supported:

MP3

WAV

WMA

APE

FLAC

## How to Play USB drive or TF card

Just connect a USB drive or TF card, then speaker will play music automatically. Please make sure your USB or TF card have music files.



USB  
flash drive



micro  
SD card

## How to Charging Speaker? .....

### —— When working (but not charging) ——


**Enough Power** indication: the battery sign on the screen normally on 

**Low Power** indication: the battery sign on the screen Blinks 

### —— Charging speaker with plug included ——

**In charging status:** the indicator  flashes while charging;

**Fully charged:** the indicator  turn on solid lights after charged fully.

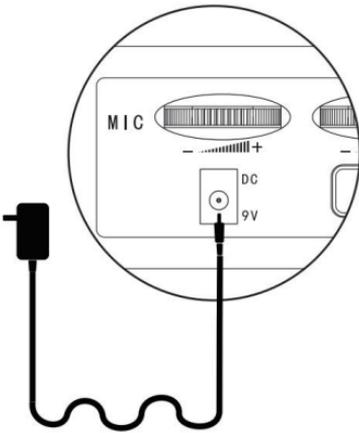

## **Please note:**

- 1** Use the included 9V AC power adapter to charge the speaker internal rechargeable battery.
- 2** Plug adapter into 110~240 AC outlet. Connect the cable end into the DC 9V power input on speaker.
- 3** It will normally take 3–5 hours to fully charge the battery.
- 4** When charging is required, a voice prompt will indicate, “Low battery, please charge.” The battery indicator will blink while charging. It will stop blinking when battery is fully charged.
- 5** Recharge the battery within 48 hours of “low battery” voice prompt. In order to extend the life of the internal battery, please charge it regularly even if system is not being used.
- 6** It is suggested that you charge the internal battery an additional 1–2 hours after fully charged to extend its life.
- 7** Please **DO NOT** over charge the battery by leaving the system plugged in continuously. This will reduce the life of the internal rechargeable battery and could cause over heating.

## How to Charging Headset Microphone? .....

### Charging headset with cable included

**In charging status:** the indicator shows red while charging



**Fully charged:** the red indicator goes off after charged fully.



## How to Charging Transmitter?.....

### Charging transmitter with cable included

**In charging status:** the indicator flashes while charging;



**Fully charged:** the indicator turn on solid lights after charged fully.

## TROUBLESHOOTINGS

Malfunction	Possible Causes	Solution
Why speaker sound volume is lower than expected even its' volume set to maximum?	Forget to turn up U8 headset mic or transmitter's volume	Please short press the "+" key on the U8 headset mic or transmitter's to turn up the volume
Powered on but no sound	1.Speaker no power; 2.No input source; 3.Volume set to the minimum;	1.Charge speaker; 2.Recheck the input; 3.Turn up 
Mic no sound	1.Connect lost; 2.Mic volume set to the minimum; 3.Speaker volume set to the minimum;	1.Please re connect mic with speaker follow above steps; 2.Click "+" button on the mic to turn up volume; 3.Turn Speaker VOL up 
Doesn't play music in the USB drive or TF card	1.Format not supported; 2.Program disorder; 3.Volume set to the minimum;	1.Only support MP3 WAV WMA APE FLAC; 2.Reboot speaker; 3.Turn up 
Howling	Microphone too close to speaker;	Keep distance between mic and speaker,Please refer to the description on page 5
Microphone loose power quickly	1.Microphone isn't charged fully; 2.Forget turn off mic volume while charging or not work;	1.Please make sure your mic is charged fully before use; 2.Please remember turn off mic volume while charging or not work;
Other		Contact us

## Package Includes:

- |                        |                          |
|------------------------|--------------------------|
| 1 * Voice Amplifier    | 1 * Charging Cable       |
| 1 * Transmitter        | 1 * Aux Cable            |
| 1 * Headset Microphone | 1 * 9V Charger           |
| 1 * Lapel Microphone   | 1 * 5V Charger           |
| 1 * Stand Microphone   | 1 * Adjustable Waistband |
| 1 * User Manual        | 1 * WinBridge Booklet    |





WinBridge



## After-sale service

---

WinBridge provide one year warranty and lifetime technical support.

 [info@winbridgepower.com](mailto:info@winbridgepower.com)



Please be confident that Seller support is just a mail away from you in case you find any difficulty. Kindly do not hesitate to write back to us if you need any clarification or any kind of support. <http://www.winbridgepower.com>

---