



 
WinBridge

Voice Amplifier User Manual



S398

Function Illustration

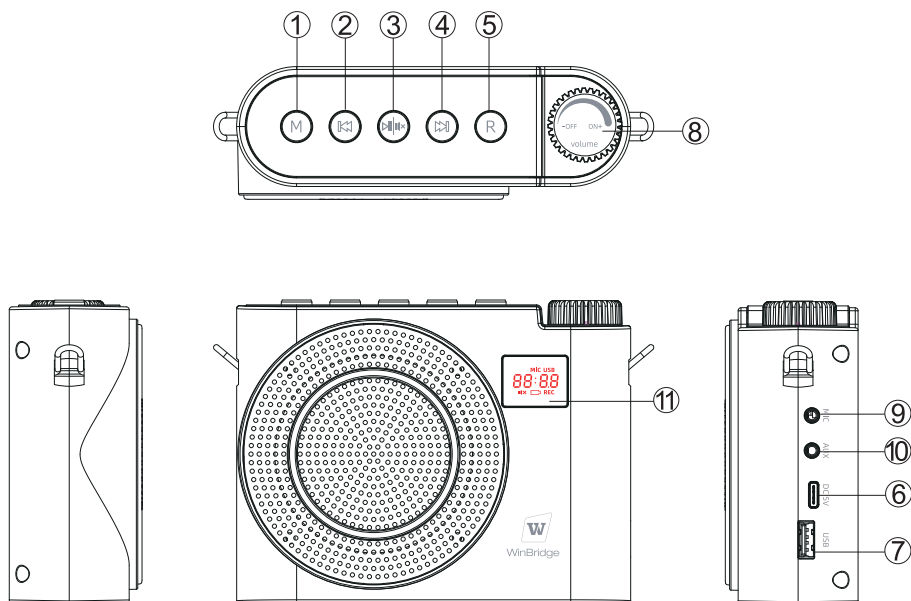


Main Function Description

1. Mode switch
2. Previous song
3. Play / Pause / Mute
4. Next song
5. Recording

 
 
- 6. DC 5V charging slot**
- 7. U Disk slot**
- 8. Power on / Power off / Volume adjustment**
- 9. MIC slot**
- 10. Aux slot**
- 11. Digital display screen**

Detailed introduction

1. Plug and play

- Turn on speaker with power switch on top of control panel, and the display shows "HI" then the "  " is displayed. Plug the headset microphone into MIC slot, and then your voice will be amplified.
- When a wired microphone is plugged in any mode, a "MIC" mark will be displayed on the screen.


- You can play music and amplify your voice at the same time.
- **In USB and Bluetooth playing mode:** You can long press the "⏮" or "⏭" button to adjust the volume of BGM.

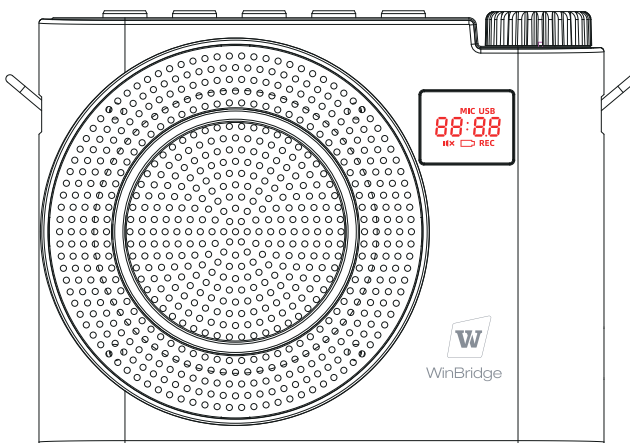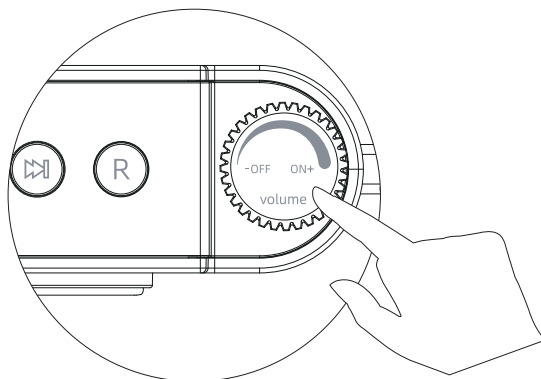


2. How to play music via U Disk


- Insert U Disk into the USB slot, speaker will play music automatically.
- Short press "⏮" to switch to the next song, short press "⏪" to switch to the previous song. The screen will display the corresponding song number first, then show play time.
- When the U disk is inserted, it will automatically switch to "USB" mode. In the "USB" mode, long press the "⏮" button to switch to single loop, and long press "⏪" button again to switch back to all loop. The screen will display "OnE" (single loop) or "ALL" (all loop)

 Noted: U Disk is NOT included;

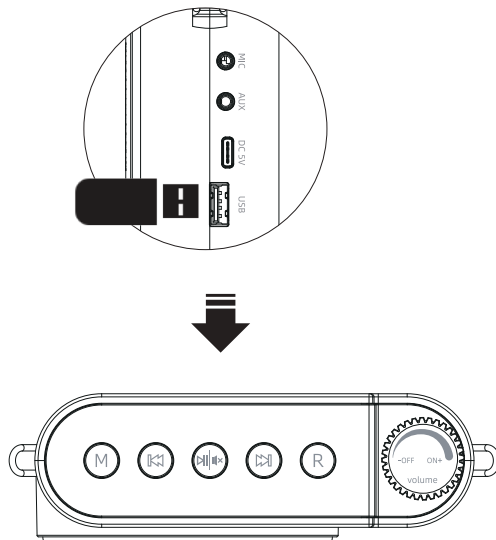



 
3. How to play recording

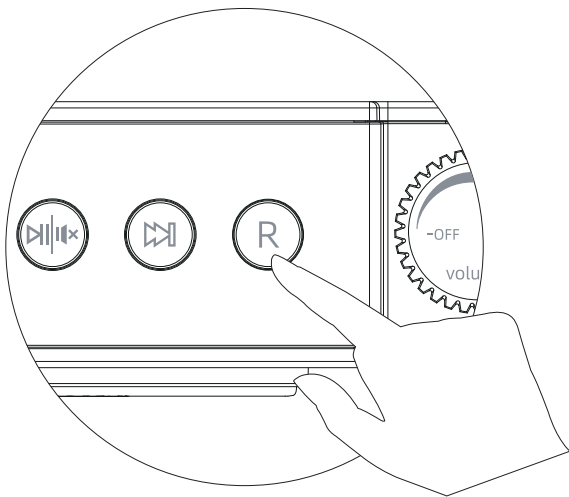- After plugging the microphone and the U disk, short press the " R " button to start recording, the screen displays " , the number 00:03 on the screen is the recording time.
- Short press the " M " button or short press the " R " button to quit the recording.
- The recording file is saved in the U disk. Long press the " R " button to play the recording file, and short press the " ⏮ " or " ⏭ " buttons to switch to the previous recording file or next recording file.
- Recording: support Bluetooth and MIC recording at the same time, which means It can record your voice while playing music via Bluetooth.





 4. How to play music via AUX input

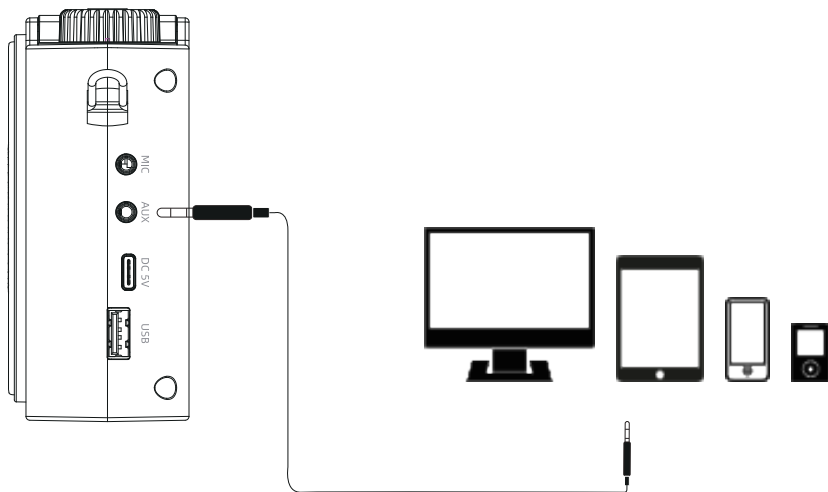• Connect speaker to external audio device (with 3.5mm audio output like computer) via audio cable included, **S398** will automatically switch to the **AUX** mode with the screen displays " **AUX** ". If there is music playing, short press the "  "button, **S398** will pause playing and muted. And short press the "  "button again to resume music playing.



5. How to play music via Bluetooth

- Press the "  "button to switch to the Bluetooth mode, when the Bluetooth is not connected, the screen displays "**bLUE**" with indicator flashing, and it will enter Bluetooth pairing mode automatically.


- Turn on your Bluetooth devices, find the device with the Bluetooth named S398 in the list, click to connect. After the pairing is successful, The display shows "  ", with a successful connection prompt. Then the " bLUE" on the screen will keep on.

 
How to play TWS

1. Turn on two S398 speakers, click their "**M**" button to enter Bluetooth mode with indicator flashing, long press one of speaker's "**M**" button to enter pairing status, the other one Bluetooth indicator become solid lights means these two speakers are connected successfully.

2. Turn on your phone or Bluetooth device and search name "**S398**" to pair. You will hear a prompt when connected successfully. After disconnecting the TWS connection, there will also be a prompt.

6. How to charge the speaker

- Using fast charging technology, it only takes 2 hours to fully charge the amplifier, and it supports charging while using.
- When the battery indicator flashes, it means that S398 needs to be charged.
- In charging status: The current battery level " " will be displayed on the screen. The longer charging time, the larger number on the screen before fully charged.
- Fully charged: The "  " stays on the screen.

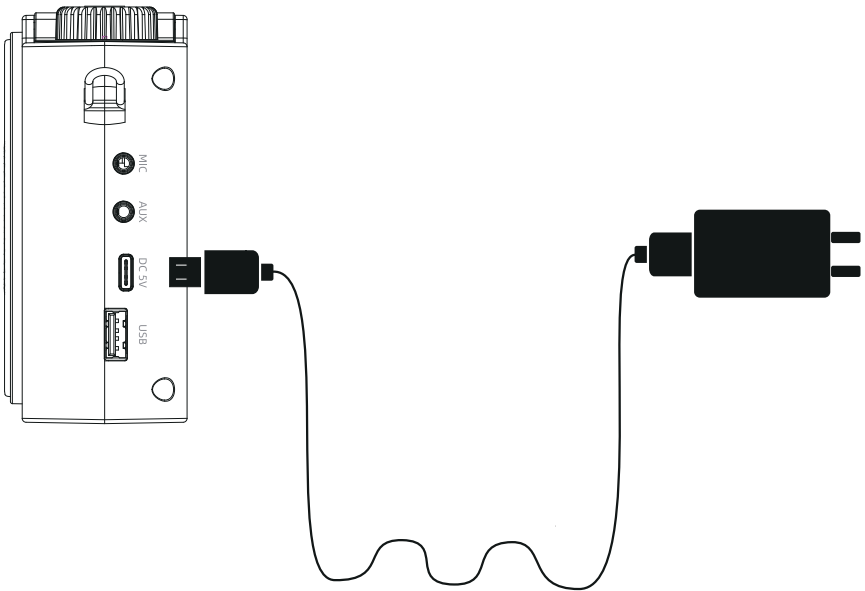


Please note:

1. Please use a DC 5V power adapter to charge the speaker.
2. Plug adapter into 110~240 AC outlet. Connect the cable end into the DC 5V power input on speaker.
3. It will normally take 2 hours to fully charge the battery.
4. When charging, the battery level is displayed, and it shows "100" after fully charged,
5. In order to extend the life of the internal battery, please charge it regularly even if system is not being used.
6. Please DO NOT over charge the battery by leaving the system plugged in continuously. This will reduce the life of the internal rechargeable battery and could cause over heating.
7. Automatic sleep function


If S398 speaker is not used (on state) for more than half an hour, it will automatically shut down to save power.

Specifications

Output power	20W	Frequency reponse	20Hz-20KHz
Battery capacity	2500mAh	Charging time	2H
Music playing time	11H (medium volume)	Amplifying voice time	18H

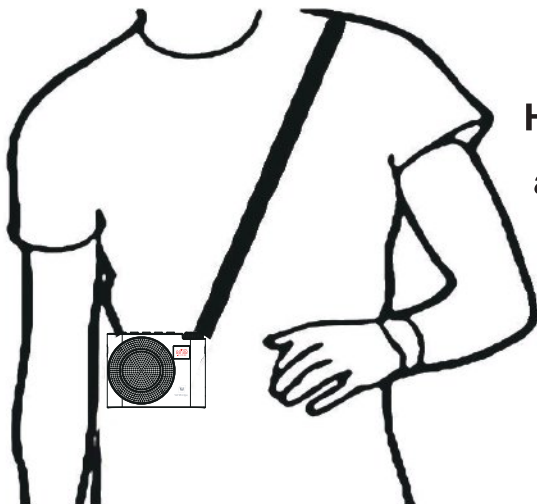 

How to wear voice amplifier unit:

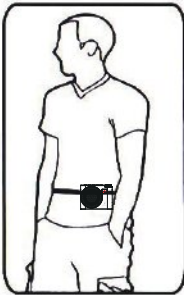 

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Package included:

- 1* Speaker
- 1* Waistband
- 1* Audio cable
- 1* User manual
- 1* Headset microphone
- 1* Type-c charging cable
- 1* USB-PD charging plug



After-sale service

WinBridge provides one year warranty and lifetime technical support.



info@wwinbridge.com

<http://www.wwinbridge.com>



Please be confident that seller support is just a mail away from you in case you find any difficulty. Kindly do not hesitate to write back to us if you need any clarification or any kind of support.