 





WinBridge

Voice Amplifier User Manual

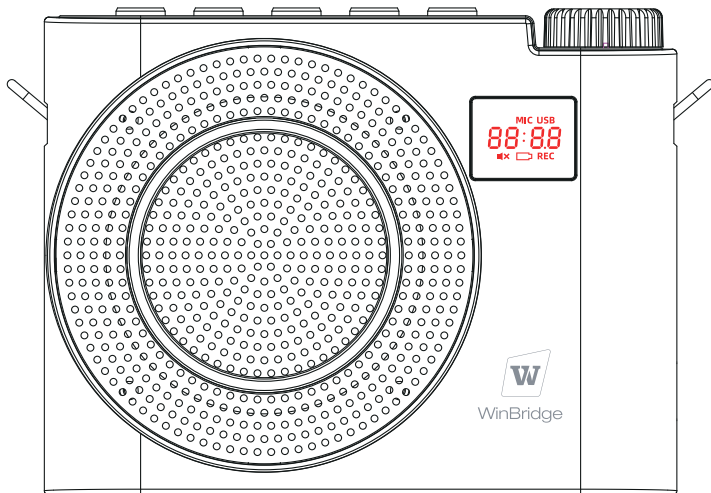

S388

 
Function Illustration

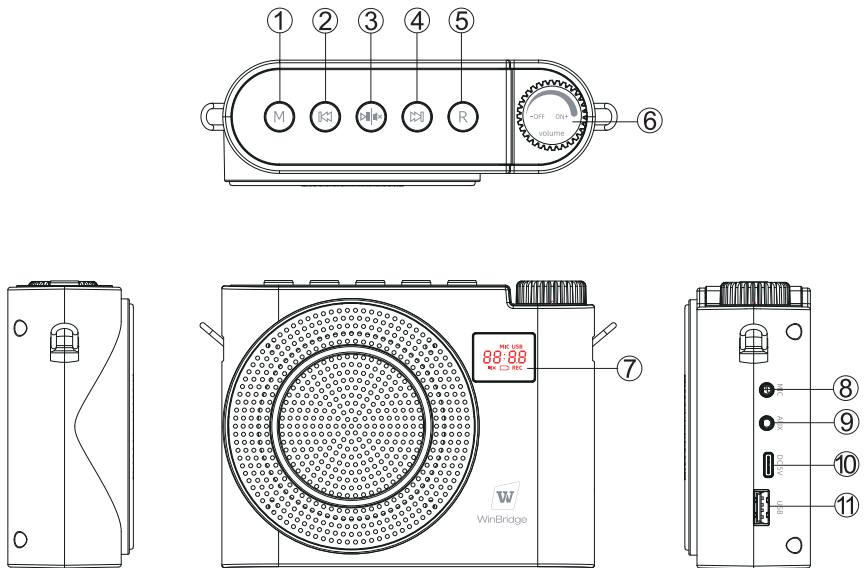


1. Mode Switch

2. Previous Song


3. Play / Pause / Mute

A: In USB mode and Bluetooth mode, short press "  " to play / pause music

B: In microphone plug-in mode, short press "  " to mute / amplify voice

4. Next Song

- 5. Recording
- 6. Knob Switch
- 7. LCD Display Screen
- 8. Mic-in Jack
- 9. Aux Jack
- 10. DC 5V Type-C Charging Port
- 11. USB Slot
- 12. Power-on Button
- 13. Charging Indicator

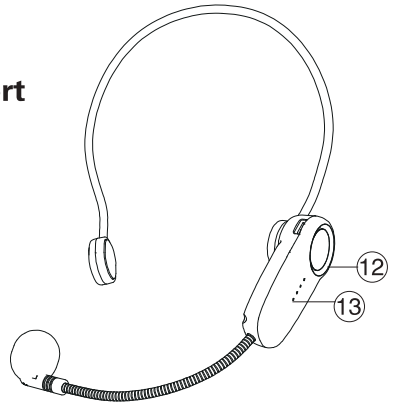

Detailed Introductions

1. How to use the wireless headset microphone



1. Twist the knob key to switch on the speaker, "HI" will appear on the display, followed by battery level, and then

shows "  "

2. Long press the power button of the wireless headset microphone to turn on the microphone, the microphone

itself will connect to the speaker automatically, the indicator on the microphone will keep constant light, and the screen shows" U1 "being a constant light.

3. Turn the volume up of the speaker and enjoy amplifying.

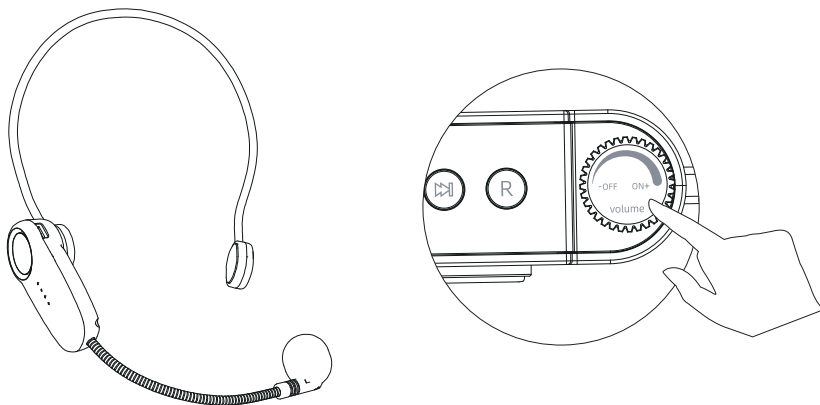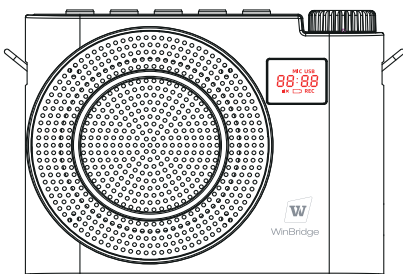


Warm Tips:

- 1) Voice amplifier's volume ranges from 0–20, a total of 20
- 2) Please kindly turn down the volume to level 0 first after switch on the speaker, the display will shows "U00", and plug the mic.
- 3) The speaker supports to play music and amplify voice at the same time. Please pair the wireless headset microphone first, then turn on the Bluetooth
- 4) In any mode, if no working signal is detected for more than 30 minutes, S388 enters into dormant status automatically, you can press any key to wake it up
- 5) You can pair more WB388 with the wireless headset microphone, but we suggest no more than 5 WB388 speakers.
- 6) You can plug in the wired microphone, pair the wireless headset microphone and amplify your voices from two microphones at the same time! (The wired microphone is NOT included.)
- 7) Please keep the distance between the wireless headset microphone and the speaker within 15m to keep the signal stable. Otherwise, the wireless microphone will disconnect, and you will need to pair the microphone and the speaker manually

2. Bluetooth

Short press "M" button to enter into Bluetooth mode with "bLUE" indicator keeps flashing on the display

The step of how to pair BT with your device:

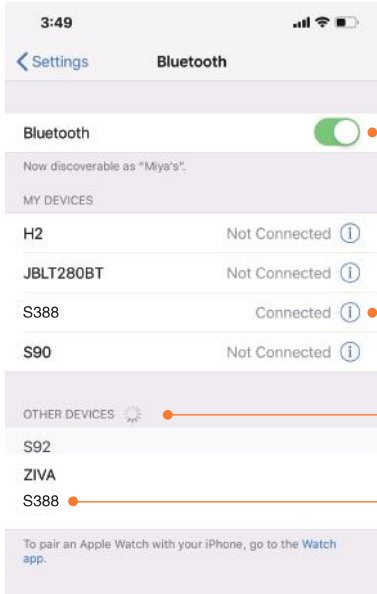

The screenshot shows the iPhone Bluetooth settings page. At the top, the time is 3:49 and the status bar shows cellular signal, Wi-Fi, and battery. The page title is "Bluetooth" with a back arrow to "Settings". The Bluetooth toggle switch is turned on. Below it, the text says "Now discoverable as 'Miya's'". Under "MY DEVICES", there is a list: H2 (Not Connected), JBLT280BT (Not Connected), S388 (Connected), and S90 (Not Connected). Under "OTHER DEVICES", there is a search icon and a list: S92 and S388. A blue banner at the bottom says "To pair an Apple Watch with your iPhone, go to the Watch app." Annotations with orange lines point to the Bluetooth toggle (Step 1), the "OTHER DEVICES" section (Step 2), the "S388" device (Step 3), and the "S388" status (Step 4).

Step 1: Turn on the Bluetooth function

Step 2: Search the Bluetooth ID "S388"

Step 3: Click "S388" to connect it

Step 4: Connected successfully

After connected successfully, the "bLUE" indicator stops blinking and lasts on, with a voice prompt "Dong"

Warm Tips:

Please keep the distance between the speaker and your device within 10m to keep the signal stable when playing audio files.

Otherwise, the Bluetooth will be disconnected

3. How to play TWS?

1. Turn on two S388 speakers, click their "**M**" button to enter Bluetooth mode with indicator flashing, long press one of speaker's "**M**" button to enter pairing status, the other one Bluetooth indicator become solid lights means these two speakers are connected successfully.
2. Turn on your phone or Bluetooth device and search name "**S388**" to pair. You will hear a prompt when connected successfully. After disconnecting the TWS connection, there will also be a prompt.

4. How to play audio files by U disk?

Insert a U disk into USB slot, the speaker will enter into USB mode and play audio files in U disk automatically, the display will occur "**USB**"

Warm tips:


1. Please make sure that the U disk have audio files (such

as: songs, recording files, etc)

2. Short press "⏮" / "⏭" to switch to previous / next audio files. Under USB mode and Bluetooth mode, long press "⏮" / "⏭" to adjust the volume

3. In USB mode, long press "M" button to enter into single repeat and all repeat, the display will show "ONE" and "ALL"

4. The U disk is NOT included

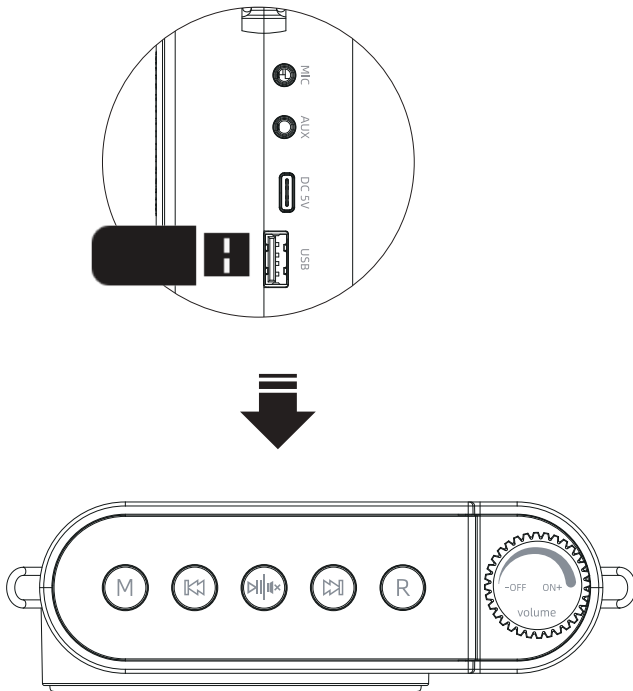


5. How to play recording?

Please make sure you have inserted a U disk and wired microphone, or please pair the wireless headset microphone **FIRST**


1. Short press the "Ⓜ" button to start recording, the recording time (such as 00:01) and the **"REC"** will flash on the screen
2. Short press the "Ⓜ" button or short press the "Ⓜ" button to quit the recording, and the recording files will be saved automatically
3. Long press the "Ⓜ" button to play recording files

Noted:

- 1) Short press "⏮" / "⏭" to switch to the previous / next audio files
 - 2) Support Bluetooth and MIC recording at the same time, which means It can record your voice while playing music via Bluetooth
- (Please pair the wireless headset microphone and insert the U disk first, then turn on the Bluetooth, otherwise record with Bluetooth music can not be done)

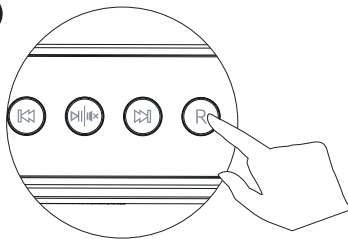


6. How to play audio files by Aux cable?



Plug the 3.5mm audio cable into the Aux jack, the speaker will enter into Aux mode and play audio files by your device automatically, the screen shows 


Audio Format supported:

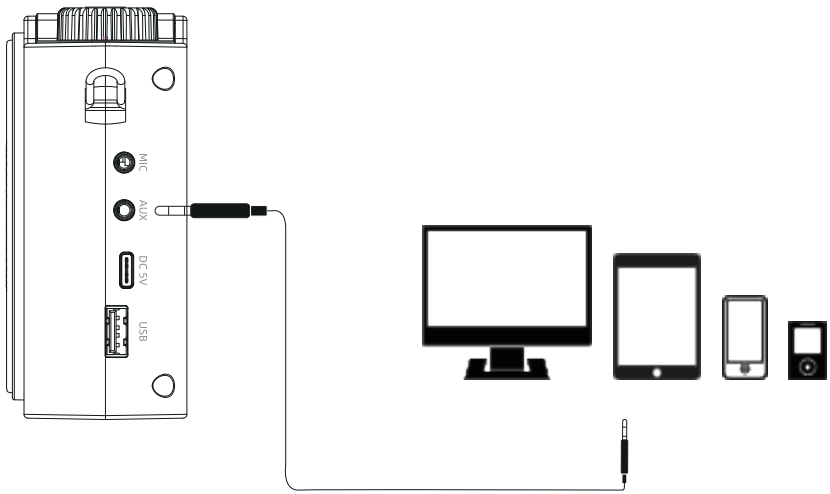- MP3
- WAV
- WMA
- APE
- FLAC



7. How to charge the speaker?

- Using fast charging technology, it takes about 3 hours to fully charge the amplifier, and it supports charging while using
- When the battery indicator flashes, it means that S388 needs to be charged
- In charging status: The current battery level "  " will be displayed on the screen. The longer charging time, the larger number on the screen before fully charged
- Fully charged: The "  " stays on the screen

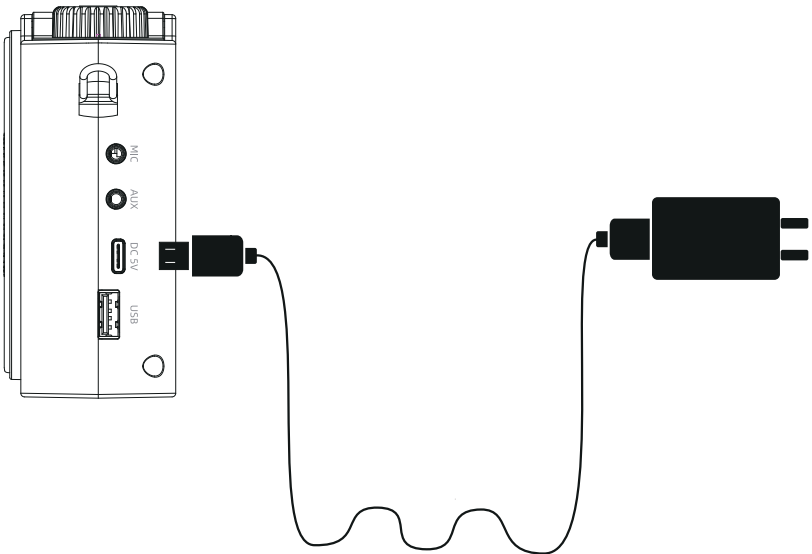

8. How to charge the wireless headset microphone


- The wireless headset microphone also uses type-c fast charging, and it takes about 2 hours to charge the microphone fully.
- Turn on the microphone. If the green light no longer keeps constant light, the microphone needs to be charged.
- In charging status: The current battery level will be displayed as 4 green indicators. The green indicators will keep flashing while charging. The longer the charging time, the more green indicators keep constant light.
- Fully charged: The 4 indicators turn on solid lights after being charged fully.

Technical Parameters:

Power output:	20W	Frequency response:	20Hz–20KHz
Battery capacity:	2500mAh	Charging port:	Type–C
Charging voltage:	DC 5V	Speaker working time:	10–12 hours
Unit weight:	0.77lb	Speaker charging time:	About 3 hours
Headset Mic battery capacity:	500mAh	Headset Mic charging time:	About 2 hours

Please note:




1. Please use a DC 5V power adapter to charge the speaker
2. Plug adapter into 110~240 AC outlet. Connect the cable end into the DC 5V power input on speaker
3. Please DO NOT over charge the battery by leaving the system plugged in continuously. This will reduce the life of the internal rechargeable battery and could cause over heating
4. Please charge the speaker before using it at the first time, unplug after fully charged in time. And please keep the amplifier's battery more than 60% when you don't use it in a long time to avoid to damage the battery

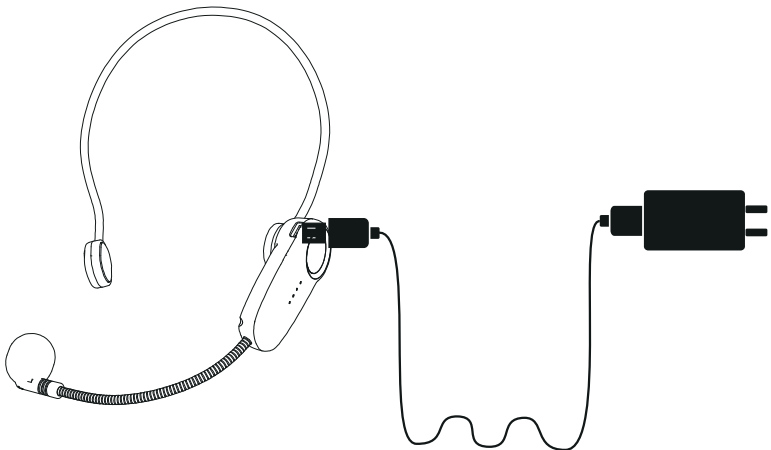

Trouble Shooting:

- 1** No sound after powered on the speaker
 - A. Scroll the switch key to adjust the volume of the speaker and turn it up
 - B. No response after any operation: Please feel free to contact us to solve your issue smoothly
- 2** Speak with wireless headset microphone, but the amplifier has no sound
 - A. Please make sure the volume of the speaker is turned up
 - B. Please make sure the volume of the wireless microphone is adjusted up
 - C. Please confirm whether the wireless microphone has been paired well with the amplifier
- 3** The voice amplifier has distinct howling
 - A. Do not point the microphone toward the speaker
 - B. Wear the microphones correctly: put the microphone in front of the mouth
 - C. In a small room, please turn down the volume properly to avoid howling

How to wear voice speaker:

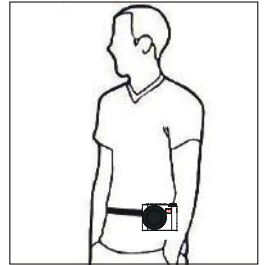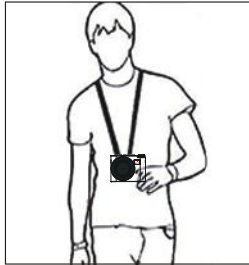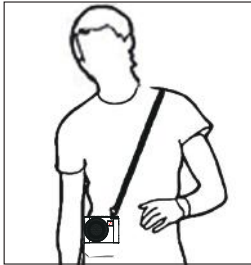

Warm Reminder:

- 1** Take out the amplifier, fasten the waist belt to metal hooks on both sides; Then tie it on the waist or hung on your shoulder, the belt is adjustable
- 2** Wear the wireless headset microphone, please adjust the position, stay 1 – 2 cm away from the mouth, and turn down the volume first to avoid howling

FCC Warning:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference

(2) This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio / TV technician for help

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Package Included:

- 1 * Voice Amplifier
- 1 * Wireless Headset Microphone
- 1 * Type-C Charging Cable
- 1 * USB-PD Charging Plug
- 1 * Audio Cable
- 1 * Adjustable Waistband
- 1 * User Manual
- 1 * WinBridge Booklet



After-sale Service

WinBridge provides one year warranty and lifetime technical support.

 info@wwinbridge.com



If you have any questions, please feel free to contact us, we will try our best to serve you